

## FreeSpeech® MP-FSMIC Microphone Status LED Blink Codes

The microphone's Status LED uses color and blink pattern codes to indicate operational status and battery condition. For additional codes, refer to the latest version of the MP-FSMIC Installation Guide (Doc. 7166).

Dual-Color  
Status LED



Charge Complete	■ ■	■ ■	■ ■
Charge in Progress	■	■	■
On (Not Paired)	■ ■ ■ ■	■ ■ ■ ■	■ ■ ■ ■
Muted	■ ■ ■ ■	■ ■ ■ ■	■ ■ ■ ■
Paired	■	■	■
Missing Beacon While Paired	■	■	■
Low Battery	■ ■	■ ■	■ ■



Crestron Electronics, Inc.  
15 Volvo Drive, Rockleigh, NJ 07647  
Tel: 888.CRESTRON Fax: 201.767.7576  
www.crestron.com

DOC. 7165B  
(2030216)  
08.12