

HZ2-BTNS

Horizon® 2 Button Assembly

- Replacement button assembly for Horizon® 2 dimmers, switches, and keypads
- Six button assembly styles are available to accommodate common button configurations
- Available blank or with custom engraving
- Engraved buttons can be backlit by a Horizon 2 dimmer, switch, or keypad
- Button assembly is field-replaceable without removing the device from the wall
- Available in white, black, and almond

The [HZ2-BTNS](#) is replacement button assembly for Horizon® 2 dimmers, switches, and keypads. Button assemblies are available in six styles to provide a variety of button configurations and each style is available in White (-W), Black (-B), and Almond (-A).

Custom Engraving Options

Identify the function of each button on the button assembly with custom, laser-etched engraving. Engraved buttons can be illuminated using the device's LED backlights. Engraving is included when ordering ENGRAVED models. Button assemblies without engraving (BLANK models) are also available and can be used as is or can be custom engraved by a third-party engraver.

Create engraving files using Impress, the Crestron Home Setup app, the Crestron Home Online Configurator, or D3Pro. If necessary, custom engraving can be changed up until the order is processed by emailing orders@crestron.com with the updated engraving file and order information.

Field-Replaceable Button Assemblies

Button assemblies can be installed on Horizon devices without removing the device from the wall. Button assembly engravings are backlit when installed in devices that provide LED backlighting.

The field-replaceable button assemblies allow for changes in device function or to allow the customer to use the system before finalizing the engravings. The button assembly can be replaced with any custom engraved or blank [HZ2-BTNS](#) button assembly.

The HZ2-BTNS series button assemblies are available in the following styles:

- **Style 1:** 5 single buttons

HZ2-BTNS-1 ENGRAVED



HZ2-BTNS-1 BLANK



- **Style 2:** 4 single buttons and 1 split rocker button; Split rocker button is located in the lowest button position

NOTE: The split rocker button does not allow for a center push and shares one backlight for the entire split rocker.

HZ2-BTNS-2 ENGRAVED



HZ2-BTNS-2 BLANK



HZ2-BTNS

Horizon® 2 Button Assembly

- **Style 3:** 4 single buttons and 1 split rocker button; Split rocker button is located in the second lowest button position

NOTE: The split rocker button does not allow for a center push and shares one backlight for the entire split rocker.

HZ2-BTNS-3 ENGRAVED



HZ2-BTNS-3 BLANK



- **Style 4:** 3 single buttons and 2 split rocker buttons; Split rocker buttons are located in the two lowest button positions

NOTE: The split rocker buttons do not allow for a center push and each split rocker shares one backlight for the entire split rocker.

HZ2-BTNS-4 ENGRAVED



HZ2-BTNS-4 BLANK



HZ2-BTNS

Horizon® 2 Button Assembly

- **Style 5:** 1 medium rocker button and 2 single buttons; Single buttons are located in the two lowest button positions

NOTE: The medium rocker button does not allow for a center push and provides a separate backlight for the top, bottom, and center positions.

HZ2-BTNS-5 ENGRAVED



HZ2-BTNS-5 BLANK



- **Style 6:** 1 large rocker button

NOTE: The large rocker button does not allow for a center push and provides a separate backlight for the top, bottom, and center positions.

HZ2-BTNS-6 ENGRAVED



HZ2-BTNS-6 BLANK



Multicolor Backlit Buttons

The engraved buttons are illuminated using the device's RGB LED backlights. Each button can be assigned custom color backlighting. The LED backlight provides feedback by changing the intensity, changing the color, or flashing to show that an action is being performed. Backlighting colors can be adjusted using Crestron Home software or other Crestron programming tools.

Local color theme sets the colors for all buttons on the device. In addition to the local color theme, each button can be assigned an alternate color theme. Thirteen local color themes are available that include Tunable White (default is Warm White), Neutral White, Cool White, and a variety of common colors. The local color theme and alternate color themes can be changed programmatically.

HZ2-BTNS

Horizon® 2 Button Assembly

Specifications

Button Assemblies

Button Assembly Replacement button assemblies are available in six styles. Each style includes one or more button types, three color options, and custom engraved or blank.

Horizon® 2 keypads, dimmers, and switches include a button assembly with the order. Refer to the Horizon 2 device product page to see the button assembly that is included with the device and the button assemblies that are compatible with the device.

Styles Button assemblies are available with the following style options:

- **Style 1:** 5 single buttons
- **Style 2:** 4 single buttons and 1 split rocker button; Split rocker button is located in the lowest button position
- **Style 3:** 4 single buttons and 1 split rocker button; Split rocker button is located in the second lowest button position
- **Style 4:** 3 single buttons and 2 split rocker buttons; Split rocker buttons are located in the two lowest button positions
- **Style 5:** 1 medium rocker button and 2 single buttons; Single buttons are located in the two lowest button positions
- **Style 6:** 1 large rocker button

Button Types The following button types are available:

- **Single button:** One press location provides center press functionality. The button can be engraved in the center. One backlight is used for the engraving.
- **Split rocker button:** Two press locations provide left and right press functionality. The button can be engraved in the center, left, and right. One backlight is shared for all engravings.
- **Medium rocker button:** Two press locations provide top and bottom press functionality. The button can be engraved in the center, top, and bottom. A separate backlight is used for each engraving position.
- **Large rocker button:** Two press locations provide top and bottom press functionality. The button can be engraved in the center, top, and bottom. A separate backlight is used for each engraving position.

NOTE: The center position of the split rocker, medium rocker, and large rocker buttons cannot be used to actuate a button.

Colors

Button assemblies are available in the following colors to match other Horizon® 2 devices:

- White (W)
- Black (B)
- Almond (A)

Engraving Options

Button assemblies are available engraved or blank:

- **Engraved:** Button assemblies ordered with the ENGRAVED option are custom engraved prior to shipment.
- **Blank:** Button assemblies ordered with the BLANK option do not include custom engraving. BLANK buttons can be used as is or can be custom engraved by a third-party engraver.

Ordering

To order replacement Horizon 2 button assemblies, order the HZ2-BTNS with selections for the style, color, and engraving options:

HZ2-BTNS-[1/2/3/4/5/6]-[A/B/W]
[ENGRAVED/BLANK]

For a complete list of models, refer to Models.

HZ2-BTNS

Horizon® 2 Button Assembly

Models

HZ2-BTNS-1-A ENGRAVED

Horizon® 2 Button Assembly, Style 1, Custom Engraved, Almond

HZ2-BTNS-1-B ENGRAVED

Horizon® 2 Button Assembly, Style 1, Custom Engraved, Black

HZ2-BTNS-1-W ENGRAVED

Horizon® 2 Button Assembly, Style 1, Custom Engraved, White

HZ2-BTNS-2-A ENGRAVED

Horizon® 2 Button Assembly, Style 2, Custom Engraved, Almond

HZ2-BTNS-2-B ENGRAVED

Horizon® 2 Button Assembly, Style 2, Custom Engraved, Black

HZ2-BTNS-2-W ENGRAVED

Horizon® 2 Button Assembly, Style 2, Custom Engraved, White

HZ2-BTNS-3-A ENGRAVED

Horizon® 2 Button Assembly, Style 3, Custom Engraved, Almond

HZ2-BTNS-3-B ENGRAVED

Horizon® 2 Button Assembly, Style 3, Custom Engraved, Black

HZ2-BTNS-3-W ENGRAVED

Horizon® 2 Button Assembly, Style 3, Custom Engraved, White

HZ2-BTNS-4-A ENGRAVED

Horizon® 2 Button Assembly, Style 4, Custom Engraved, Almond

HZ2-BTNS-4-B ENGRAVED

Horizon® 2 Button Assembly, Style 4, Custom Engraved, Black

HZ2-BTNS-4-W ENGRAVED

Horizon® 2 Button Assembly, Style 4, Custom Engraved, White

HZ2-BTNS-5-A ENGRAVED

Horizon® 2 Button Assembly, Style 5, Custom Engraved, Almond

HZ2-BTNS-5-B ENGRAVED

Horizon® 2 Button Assembly, Style 5, Custom Engraved, Black

HZ2-BTNS-5-W ENGRAVED

Horizon® 2 Button Assembly, Style 5, Custom Engraved, White

HZ2-BTNS-6-A ENGRAVED

Horizon® 2 Button Assembly, Style 6, Custom Engraved, Almond

HZ2-BTNS-6-B ENGRAVED

Horizon® 2 Button Assembly, Style 6, Custom Engraved, Black

HZ2-BTNS-6-W ENGRAVED

Horizon® 2 Button Assembly, Style 6, Custom Engraved, White

HZ2-BTNS-1-A-BLANK

Horizon® 2 Button Assembly, Style 1, Not Engraved, Almond

HZ2-BTNS-1-B-BLANK

Horizon® 2 Button Assembly, Style 1, Not Engraved, Black

HZ2-BTNS-1-W-BLANK

Horizon® 2 Button Assembly, Style 1, Not Engraved, White

HZ2-BTNS-2-A-BLANK

Horizon® 2 Button Assembly, Style 2, Not Engraved, Almond

HZ2-BTNS-2-B-BLANK

Horizon® 2 Button Assembly, Style 2, Not Engraved, Black

HZ2-BTNS-2-W-BLANK

Horizon® 2 Button Assembly, Style 2, Not Engraved, White

HZ2-BTNS-3-A-BLANK

Horizon® 2 Button Assembly, Style 3, Not Engraved, Almond

HZ2-BTNS-3-B-BLANK

Horizon® 2 Button Assembly, Style 3, Not Engraved, Black

HZ2-BTNS-3-W-BLANK

Horizon® 2 Button Assembly, Style 3, Not Engraved, White

HZ2-BTNS-4-A-BLANK

Horizon® 2 Button Assembly, Style 4, Not Engraved, Almond

HZ2-BTNS-4-B-BLANK

Horizon® 2 Button Assembly, Style 4, Not Engraved, Black

HZ2-BTNS-4-W-BLANK

Horizon® 2 Button Assembly, Style 4, Not Engraved, White

HZ2-BTNS-5-A-BLANK

Horizon® 2 Button Assembly, Style 5, Not Engraved, Almond

HZ2-BTNS-5-B-BLANK

Horizon® 2 Button Assembly, Style 5, Not Engraved, Black

HZ2-BTNS-5-W-BLANK

Horizon® 2 Button Assembly, Style 5, Not Engraved, White

HZ2-BTNS-6-A-BLANK

Horizon® 2 Button Assembly, Style 6, Not Engraved, Almond

HZ2-BTNS-6-B-BLANK

Horizon® 2 Button Assembly, Style 6, Not Engraved, Black

HZ2-BTNS-6-W-BLANK

Horizon® 2 Button Assembly, Style 6, Not Engraved, White

HZ2-BTNS

Horizon® 2 Button Assembly

This product may be purchased from select authorized Crestron dealers and distributors. To find a dealer or distributor, please contact the Crestron sales representative for your area. A list of sales representatives is available online at www.crestron.com/How-To-Buy/Find-a-Representative or contact us for additional information by visiting www.crestron.com/contact/our-locations for your local contact.

The original language version of this document is U.S. English. All other languages are a translation of the original document.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed online at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron, the Crestron logo, Crestron Home, and Horizon are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

Specifications are subject to change without notice.

©2023 Crestron Electronics, Inc.

Rev 12/22/23