



DM-NVX-E760/DM-NVX-E760C
DM NVX[®] 4K60 4:4:4 HDR Network AV
Encoder with DM[®] Input

Web Interface Configuration Guide

Crestron Electronics, Inc.

Original Instructions

The U.S. English version of this document is the original instructions.

All other languages are a translation of the original instructions.

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, visit www.crestron.com/opensource.

Crestron, the Crestron logo, .AV Framework, 3-Series, 3-Series Control System, Adagio, AirMedia, Auto-Locking, Cameo, Core 3, Core 3 UI, CresFiber, Cresnet, Crestron Avia, Crestron Toolbox, and DigitalMedia are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Dolby and Dolby Atmos are either trademarks or registered trademarks of Dolby Laboratories in the United States and/or other countries. DTS HD and DTS:X are either trademarks or registered trademarks of DTS, Inc. in the United States and/or other countries. HDMI is either a trademark or registered trademark of HDMI Licensing LLC in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2020 Crestron Electronics, Inc.

Contents

Introduction	1
Web Interface Overview	1
Access the Web Interface	1
Access Web Interface with a Web Browser	1
Access Web Interface with Crestron Toolbox™ Software	2
Status	4
Device	5
Network	5
DM NVX Director	6
DM NAX (AES67) Audio	6
Control System	7
Input	7
Settings	9
System Setup	10
Stream	13
DM NAX (AES67) Audio	17
Routing	18
Inputs	19
Outputs	19
Security	20
Current User	22
Users	23
Create New Local User	24
Add Active Directory User	24
Delete User	25
View User Details	25
Update User Details	26
Groups	27
Create Local Group	28
Add Active Directory Group	28
Delete a Group	29
View Group Details	29
802.1x Configuration	30
Configure DM-NVX-E760/DM-NVX-E760C for 802.1X Authentication:	32

Introduction

Web Interface Overview

The web interface of the DM-NVX-E760/DM-NVX-E760C allows you to view status information for the DM-NVX-E760/DM-NVX-E760C and configure its network and device settings.

Access the Web Interface

The web interface is accessed from a web browser. The following table lists various operating systems and the corresponding supported web browsers.

OPERATING SYSTEM	SUPPORTED WEB BROWSERS
Windows® operating system	Chrome™ web browser, version 31 and later Firefox® web browser, version 31 and later Internet Explorer web browser, version 11 and later Microsoft Edge web browser
macOS® operating system	Safari® web browser, version 6 and later Chrome™ web browser, version 31 and later Firefox® web browser, version 31 and later

To access the user interface, do either of the following:

- Open it directly in a web browser.
- Open a web browser from within the Crestron Toolbox™ application.

Access Web Interface with a Web Browser


1. Enter the IP address of the DM-NVX-E760/DM-NVX-E760C into a web browser.

NOTE: To obtain the IP address, press the **Setup** button on the front panel of the DMF-CI-8 chassis of the DM-NVX-E760/DM-NVX-E760C. The IP address will appear on a display connected to the HDMI® output.

2. Enter your credentials in the **Device Administration** dialog (Note that the user name and password are case sensitive). The default user name is *admin*, and the default password is *admin*.

NOTE: For enhanced security, it is recommended that the default password be changed.

Device Administration Login Page

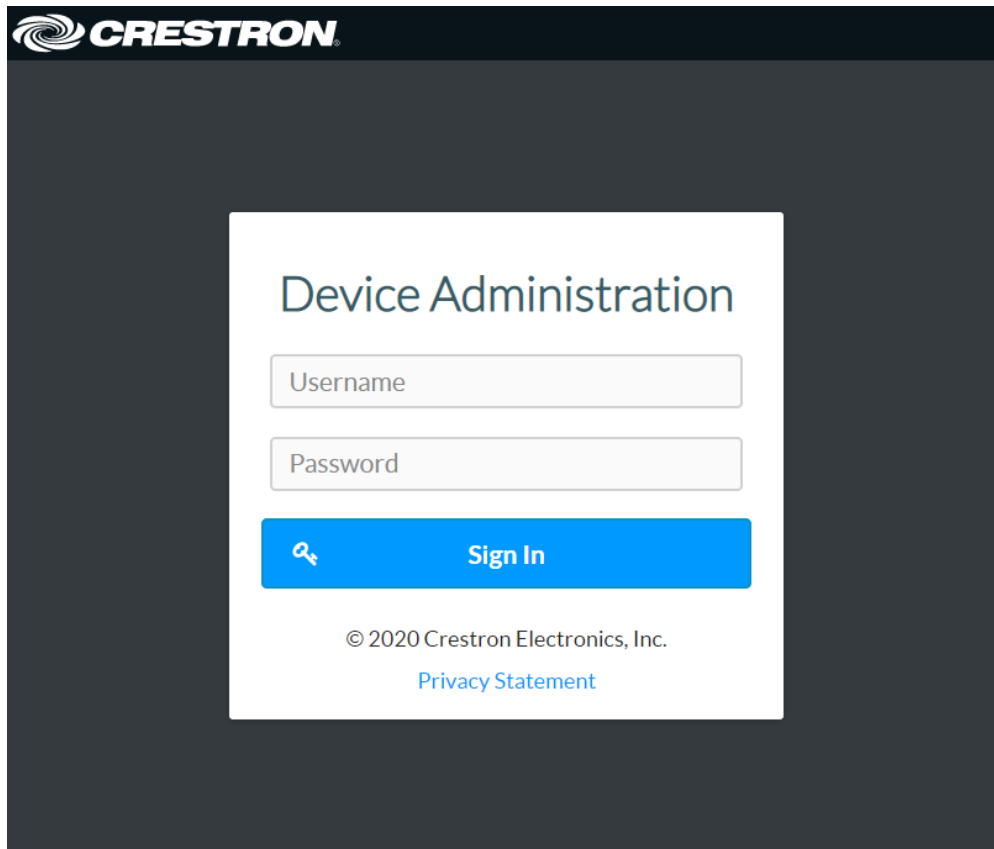

CRESTRON


Device Administration

© 2020 Crestron Electronics, Inc.
[Privacy Statement](#)

3. Click **Sign In**.

Access Web Interface with Crestron Toolbox™ Software

To access the user interface by opening a web browser within the Crestron Toolbox™ application, do the following:

1. Open the Crestron Toolbox™ application.
2. From the **Tools** menu, select **Device Discovery Tool**. You can also access the Device Discovery Tool by clicking the Device Discovery Tool button  in the Crestron Toolbox toolbar. The DM-NVX-E760/DM-NVX-E760C is discovered and is listed in the device list on the left side of the screen. The associated host name, IP address, and firmware version are also displayed.

NOTE: If there is security software running on the computer, a security alert might be displayed when the Crestron Toolbox application attempts to connect to the network. Make sure to allow the connection, so that the Device Discovery Tool can be used.

3. In the Device Discovery Tool list, double-click your DM-NVX-E760/DM-NVX-E760C device.
4. Enter your credentials in the **Authentication** dialog that opens, and then click **Log In**.
5. Click the **Web Configuration** button in the Configuration page displayed on the left side of the Device Discovery Tool.

Status

The Status page is the first page that is displayed when opening the web interface of DM-NVX-E760/DM-NVX-E760C. It displays general information about the DM-NVX-E760/DM-NVX-E760C (such as model name, serial number, and firmware version), current network settings (such as host name and IP address, etc.), as well as information about the connection to the control system.

The Status page can be accessed at any time by clicking the **Status** tab in the navigation bar of the web user interface of the DM-NVX-E760/DM-NVX-E760C.

DM-NVX-E760/DM-NVX-E760C Status Page

The screenshot shows the Crestron web interface for a DM-NVX-E760 device. At the top, the Crestron logo is on the left, and a help icon (?) and user profile icon are on the right. Below the header, the device ID "DM-NVX-E760-00107F9CB9DD" is displayed on the left, and a blue "Action" button with a dropdown arrow is on the right. A navigation bar contains four tabs: "Status" (selected with a checkmark), "Settings" (gear icon), "Security" (lock icon), and "802.1x Configuration" (gear icon). Below the navigation bar is a list of expandable sections: "Device", "Network", "DM NVX Director", "DM NAX (AES67) Audio", "Control System", and "Input". At the bottom left, the copyright notice reads "© 2020 Crestron Electronics, Inc. CCUI Version: 2.59.841573". At the bottom right, there is a link for "Privacy Statement".

Device

Displays the **Model**, **Serial Number**, and **Firmware Version** of the DM-NVX-E760/DM-NVX-E760C.

Status Page - Device

▼ Device

Model	DM-NVX-E760
Serial Number	X139086
Firmware Version	5.1.4651.00004

+ More Details

Click on **+ More Details** to see additional information about the DM-NVX-E760/DM-NVX-E760C.

Network

Displays the **Host Name**, **Domain Name**, **DHCP Enabled**, **IP Address**, **DNS Servers**, **Default Gateway**, **Link Active**, **Mac Address**, and **Subnet Mask** of the DM-NVX-E760/DM-NVX-E760C.

NOTE: By default, the host name of DM-NVX-E760/DM-NVX-E760C consists of the model name followed by the MAC address of the device. For example, DM-NVX-E760/DM-NVX-E760C-00107F9CB9DD.

Status Page - Network

▼ Network

Host Name	DM-NVX-E760-00107F9CB9DD
Domain Name	CRESTRON.CRESTRON.com
DHCP Enabled	True
IP Address	172.30.160.78
Primary Static DNS	192.168.204.23(DHCP)
Secondary Static DNS	192.168.204.24(DHCP)
Default Gateway	172.30.160.1
Link Active	True
MAC Address	00.10.7f.9c.b9.dd
Subnet Mask	255.255.240.0

DM NVX Director

Displays the DM NVX Director settings. Note that the fields below will not be populated when using XiO-Director v 1.0.

Status Page - DM NVX Director

▼ DM NVX Director

DM NVX Director Host Name

Domain Name

Domain Number

Domain Slot Number

- **DM NVX Director HostName:** Displays the host name of the DM-NVX-Director.
- **Domain Name:** Displays the domain name of the DM-NVX-Director.
- **Domain Number:** Displays the domain number of the DM-NVX-Director.
- **Domain Slot Number:** Displays the domain slot number of the DM-NVX-Director.

DM NAX (AES67) Audio

Displays the following audio information for both **DM NAX (AES67) Transmit** and **DM NAX (AES67) Receive**.

Status Page - DM NAX (AES67) Audio

▼ DM NAX (AES67) Audio

— DM NAX (AES67) Transmit

Status	Stream Stopped
DM NAX (AES67) Audio Mode	Automatic
Port	5004
Multicast Address	0.0.0.0

— DM NAX (AES67) Receive

Status	Stream Stopped
Port	5004
Multicast Address	0.0.0.0

- **Status:** Displays the status of the stream.
- **DM NAX (AES67) Audio Mode:** (DM NAX (AES67) Transmit only) By default, the mode is set to **Automatic** which will add +1 to the outgoing video stream multicast address. For example, if the Video multicast address is 239.8.0.0, the DM NAX (AES67) Multicast address will be 239.8.0.1. The mode can also be set to **Manual** (which will allow setting the multicast address in the field below) or **Disabled**.
- **Multicast Address:** Sets the multicast address. This is only available when **Mode** is set to **Manual**.
- **Port:** Sets the port number. Available when **Mode** is set to **Manual**.

Control System

Displays the following connection information.

Status Page - Control System

The screenshot shows a web interface for the Control System. At the top, there is a blue header with a dropdown arrow and the text "Control System". Below the header, the text "Encrypt Connection OFF" is displayed. Underneath, there is a section titled "IP Table" with a minus sign and a table. The table has seven columns: IP ID, Room ID, IP Address/Hostname, Type, Server Port, Connection, and Status. The table is currently empty, with the text "No records found" centered below it.

IP ID	Room ID	IP Address/Hostname	Type	Server Port	Connection	Status
No records found						

- **Encrypt Connection:** Displays **ON** if the connection is encrypted or **OFF** if it is not.
- **IP ID:** Displays the IP ID of DM-NVX-E760/DM-NVX-E760C.
- **Room ID:** Displays the Room ID of the control system.
- **IP Address/Hostname:** Displays the IP address and Hostname of the control system.
- **Type:** Always set to **Peer**.
- **Server Port:** Displays the server port. The default port is set to **41794**.
- **Connection:** Always displays **Gway**.
- **Status:** The status will be either **OFFLINE** or **ONLINE**.

Input

Displays the following input information.

Status Page - Input

The screenshot shows a web interface for the Input status page. At the top, there is a blue header with a dropdown arrow and the text "Input". Below the header, the text "Inputs" is displayed with a minus sign and a table. The table has nine columns: Name, Sync Detected, Resolution, Source HDCP, Source Content Stream Type, Interlaced, Aspect Ratio, Audio Format, and Audio Channels. There is one row of data for "INPUT 1".

Name	Sync Detected	Resolution	Source HDCP	Source Content Stream Type	Interlaced	Aspect Ratio	Audio Format	Audio Channels
INPUT 1	Yes	1920x1080@60	Authenticated	Auto	No	16:9	LPCM	2


- **Name:** Displays the name of the input.
- **Sync Detected:** Displays whether sync is detected (**Yes**) or not (**No**).
- **Resolution:** Displays the resolution.
- **Source HDCP:** Displays the status of the source HDCP.
- **Source Content Stream Type:** Displays the stream type of the source content.
- **Interlaced:** Displays whether the stream is interlaced (**Yes**) or not (**No**).
- **Aspect Ratio:** Displays the aspect ratio.
- **Audio Format:** Displays the audio format.
- **Audio Channels:** Displays the number of audio channels.

Settings

The Settings page can be used to configure the DM-NVX-E760/DM-NVX-E760C.

The Settings page can be accessed at any time by clicking the **Settings** tab in the navigation bar of the web user interface of the DM-NVX-E760/DM-NVX-E760C.


DM-NVX-E760/DM-NVX-E760C Settings Page

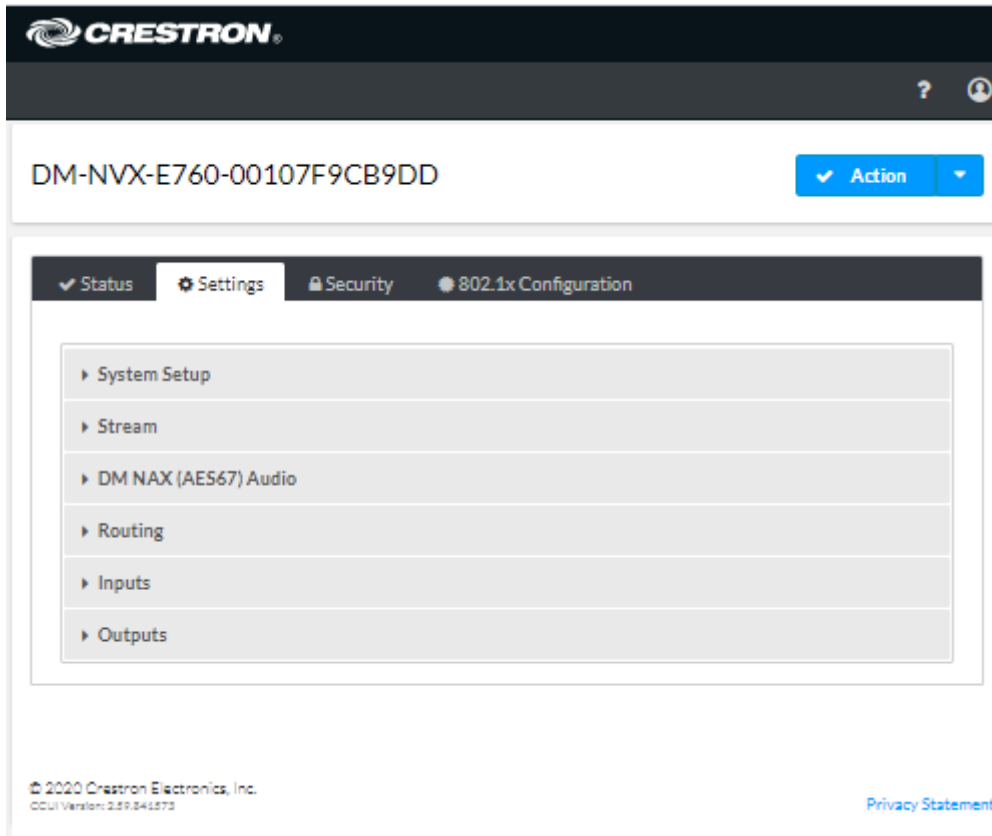

System Setup

The System Setup settings allow you to configure the following system settings for the DM-NVX-E760/DM-NVX-E760C.

Settings Page - Network

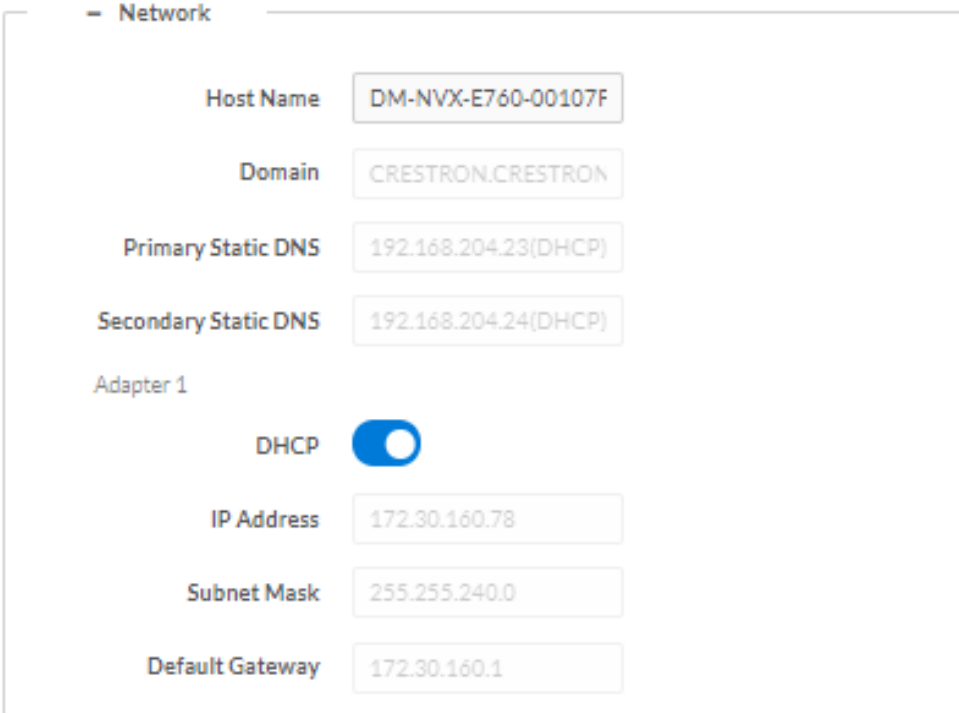


The screenshot shows the 'Network' settings page. It features a list of configuration fields for 'Adapter 1'. The fields are: Host Name (DM-NVX-E760-00107F), Domain (CRESTRON.CRESTRON), Primary Static DNS (192.168.204.23(DHCP)), Secondary Static DNS (192.168.204.24(DHCP)), DHCP (a blue toggle switch that is turned on), IP Address (172.30.160.78), Subnet Mask (255.255.240.0), and Default Gateway (172.30.160.1).

The Network settings allow you to configure the **Host Name**, **Domain Name**, and **DNS Servers** of the DM-NVX-E760/DM-NVX-E760C.

NOTE: By default, the host name of DM-NVX-E760/DM-NVX-E760C consists of the model name followed by the MAC address of the device. For example, DM-NVX-E760/DM-NVX-E760C-00107F7C6544.

Adapter 1: Enable or disable **DHCP**. The **IP Address**, **Subnet Mask**, **Default Gateway**, **Link Active**, and **Mac Address** of the DM-NVX-E760/DM-NVX-E760C are also displayed.

Settings Page - Network Interface

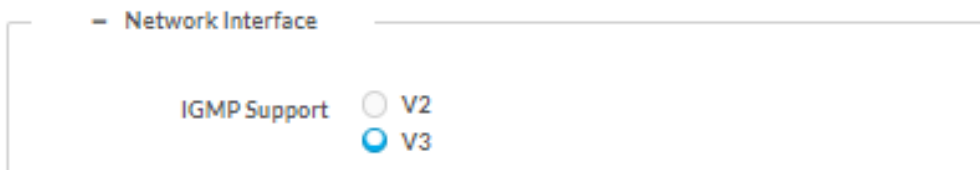

The screenshot shows the 'Network Interface' settings page. It features a single configuration field: IGMP Support, which has two radio button options: V2 (unselected) and V3 (selected).


Network Interface: Select either **V2** or **V3** for **IGMP Support**.

Settings Page - Cloud Settings



Cloud Configuration Service Connection: Toggle the switch to enable or disable the cloud configuration service connection.

Settings Page - Auto Update

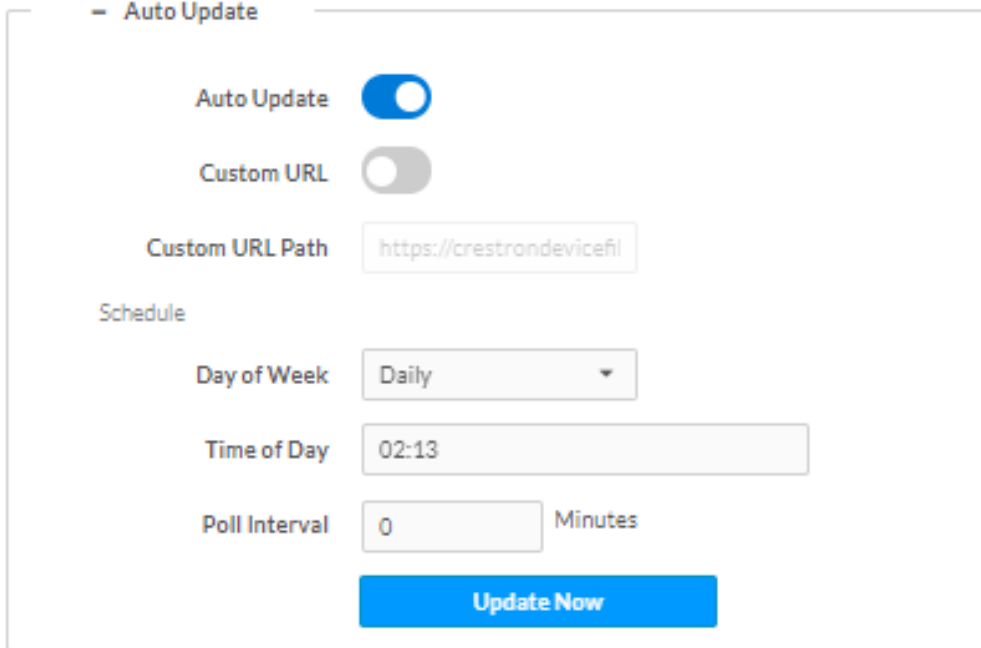

To automatically update the controls provided on the web interface of DM-NVX-E760/DM-NVX-E760C, do the following:

1. Move the **Auto Update** slider to the enabled position. By default, the auto update functionality is set to enabled.
2. Enter a path to the update cloud in the **Custom URL Path** field.

If you wish to schedule auto update to occur on certain days of the week, click the **Day of Week** drop-down and select the desired option (available options are as follows: Daily, Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday) and then enter time of the day when the auto update will start in the **Time of Day** field.

If you wish to specify polling interval, enter a value in the **Poll Interval** field. Click the **Update Now** button to force an update immediately.

Settings Page - Date/Time

	Address	Port	Authentication Method	Authentication Key	Key ID
<input type="checkbox"/>	pool.ntp.org	123	None	*****	0

Configure the date and time settings of the DM-NVX-E760/DM-NVX-E760C in the **Configure Date/Time** section of the screen.

1. Move the **Time Synchronization** slider to the desired position to specify whether time synchronization will be enabled or disabled. By default, time synchronization is enabled.
2. In the **Time Server** field, enter the URL of the NTP or SNTP server.
3. Click **Synchronize Now** to perform time synchronization between the device's internal clock and the time server.
4. Click on the **Time Zone** drop-down to select the applicable time zone.
5. In the **Time (24hr Format)** field, enter current time in 24-hour format.
6. In the **Date** field, enter the current date.

Settings Page - Discovery Config

Discovery Agent	<input checked="" type="checkbox"/>
Custom TTL	<input type="checkbox"/>
TTL	5

Move the **Discovery Agent** slider to enabled or disabled to specify if the DM-NVX-E760/DM-NVX-E760C is discoverable or not. When Discovery Agent is enabled, the DM-NVX-E760/DM-NVX-E760C is displayed in the **Available Streams** list of other receivers.

If you would like to use a custom TTL value, select the **Custom TTL** option and then enter the value in the **TTL** field.

Settings Page - Control System

Control System

Encrypt Connection

IP Table

<input type="checkbox"/>	IP ID	IP Address/Hostname	Room ID
No records found			
<input type="button" value="+ Add"/>		<input type="button" value="x Remove"/>	

1. Toggle **Encrypt Connection** to specify whether to use encryption. By default, **Encrypt Connection** is disabled.
Note that when encryption is enabled, the **Control System Username** and **Control System Password** fields are displayed to provide login information.
2. Enter the Room ID in the **Room ID** field.
3. Select the IP ID of the DM-NVX-E760/DM-NVX-E760C in the **IP ID** drop-down list. Valid values range from 03 to FE in hexadecimal notation.
4. Enter the IP address or hostname of the control system in the **IP Address/Hostname** field.

Stream

Settings Page - Stream

Stream


Multicast Address

Device Name

Stream Location

Status Stream stopped

Resolution

Preview 

- **Multicast Address:** Displays the multicast address.
- **Device Name:** Displays the name of the DM-NVX-E760/DM-NVX-E760C.
- **Stream Location:** Displays the location of the stream.

- **Status:** Displays the status of the device, for example, 'Stream stopped', 'Stream started', 'Connecting', etc.
- **Resolution:** Displays the resolution of an incoming stream.
- **Preview:** Displays a preview thumbnail of the stream.

Settings Page - Services

Services (Autosaved)

Preview Settings

Preview Output

Base File Name

Generated Preview Images

Type	File Name
135px	preview_135px.jpeg
270px	preview_270px.jpeg
540px	preview_540px.jpeg

Local Preview Path

- **Preview Output:** Toggle to control whether the preview output is enabled or disabled.
- **Base File Name:** Enter the desired base file name. This will become the prefix of the generated preview images.
- **Generated Preview Images:** Displays the **Type** and **File Name** of the generated preview images. The file names are made up of the prefix entered in **Base File Name**, an underscore, and the size of the image in pixels.
- **Local Preview Path:** Displays the **Local Preview Path**.

Settings Page - Advanced

- Advanced (Autosaved)

Auto Initiation

Custom Ports

RTSP Port

TS Port

Adaptive Bitrate

Bitrate

Custom Bitrate Mbps

Active Bitrate 686 Mbps

Custom TTL

TTL

Custom DSCP

DSCP

Statistics

Statistics

Packets Transmitted 0

Packets Dropped 0

Audio/Video

Audio Channels 0

Audio Format No Audio

Aspect Ratio No Signal

- **Auto Initiation:** Move the **Auto Initiation** slider to the desired position (enabled or disabled) to specify whether the stream will automatically start when the correct parameters are set. By default, **Automatic Initiation** is enabled.

Press the **Start** or **Stop** button to start or stop a stream if **Automatic Initiation** is disabled. Note that when **Automatic Initiation** is disabled, the device will not attempt to start a stream until the **Start** button is pressed.

- **Custom Ports:** Toggle the **Custom Ports** switch to enable the option to specify a custom RTSP or TS port. Crestron recommends using a custom port value greater than 10000.
- **RTSP Port:** Enter a custom TCP port number for the RTSP server of the primary audio/video stream (Transmitter mode only).

Valid values range from 1 to 65535. By default, the RTSP Port of the DM-NVX-E760/DM-NVX-E760C is set to port 554.

- **TS Port:** Enter a custom UDP port at which both audio and video are transmitted. The value must be an even number. An odd value will be rejected by the device. By default, the TS Port is set to 4570. Valid values range from 1 to 65530.
- **Adaptive Bitrate:** (Only applicable in Transmitter Mode) Select this option to have the device adapt the bitrate automatically based on the resolution of the stream. If this is selected, the bitrate cannot be manually selected with the **Bitrate** option below.
- **Bitrate:** (Only applicable in Transmitter Mode). Select a bitrate from the **Bitrate** drop-down list to set the bitrate of the transmitted stream in Mbps. Crestron recommends using the default value.
- Select **Custom** in the **Bitrate** drop-down list and type a custom value (in Mbps) in the **Custom Bitrate** field below.
- **Active Bitrate:** Displays the current Bitrate of the stream.
- (Only applicable in Transmitter Mode) Toggle the **Custom TTL** switch to enable the option to enter a custom TTL (Time-to-Live) value in the **TTL** field. TTL values can range from 1 to 255.
- (Only applicable in Transmitter Mode) Toggle the **Custom DSCP** switch to enable the option to enter a custom value in the **DSCP** field. DSCP values can range from 1 to 63.
- **Statistics:** Toggle **Statistics** on in order to view **Packets Transmitted** and **Packets Dropped**. Click **Reset Statistics** to reset this information.
- **Audio/Video:** Displays information for **Audio Channels**, **Audio Format**, and **Audio Ratio**.

DM NAX (AES67) Audio

Settings Page - DM NAX (AES67) Audio

DM NAX (AES67) Audio

DM NAX (AES67) Transmit (Autosaved)

Mode: Automatic

Multicast Address: 0.0.0.0

Port: 5004

DM NAX (AES67) Transmit Advanced (Autosaved)

Auto Initiation:

Start Stop

Status: Stream Stopped

Encoding Format: LPCM

Encoding Sample Rate: 48000

Bitrate: 3072

Channels: 2

DM NAX (AES67) Receive (Autosaved)

Multicast Address: 0.0.0.0

Port: 5004

DM NAX (AES67) Receive Advanced (Autosaved)

Auto Initiation:

Start Stop

Status: Stream Stopped

Encoding Format: LPCM

Encoding Sample Rate: 48000

Bitrate: 3072

Channels: 2

DM NAX (AES67) Transmit

- **Mode:** By default, the mode is set to **Automatic** which will add +1 to the outgoing video stream multicast address. For example, if the Video multicast address is 239.8.0.0, the DM NAX (AES67) Multicast address will be 239.8.0.1. The mode can also be set to **Manual** (which will allow setting the multicast address in the field below) or **Disabled**.
- **Multicast Address:** Sets the multicast address. This is only available when **Mode** is set to **Manual**.
- **Port:** Sets the port number. Available when **Mode** is set to **Manual**.

DM NAX (AES67) Receive


- **Multicast Address:** Sets the multicast address.
- **Port:** Sets the port number.

Under both **DM NAX (AES67) Transmit Advanced** and **DM NAX (AES67) Receive Advanced** are the following options:

- **Auto Initiation:** Toggle **Auto Initiation** to either enable or disable it. If disabled, the **Start** and **Stop** buttons become available for use.
- **Status:** Displays the status of the stream.
- **Encoding Format:** Displays the encoding format of the stream.
- **Encoding Sample Rate:** Displays the encoding sample rate of the stream.
- **Bitrate:** Displays the bitrate of the stream.
- **Channels:** Displays the number of channels.

Routing

Settings Page - Routing

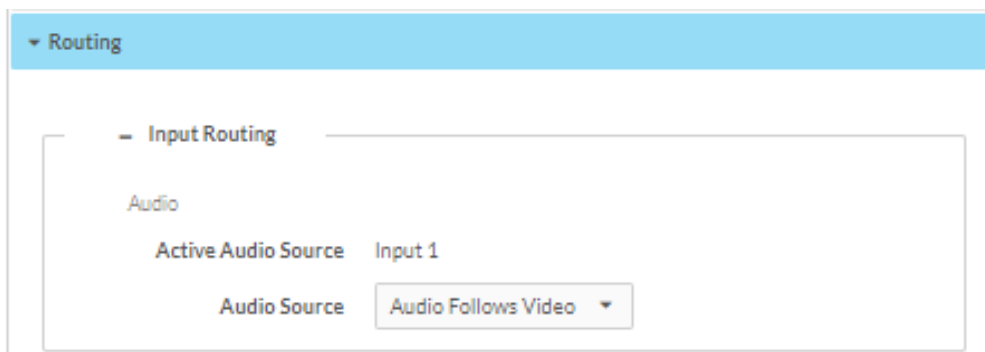

Select the desired audio source in the **Audio Source** drop-down list: **Audio Follows Video**, **Input 1**, or **DM NAX(AES67) Audio**.

Inputs

Settings Page - Inputs

Inputs

Name	Sync Detected	EDID	HDCP Receiver Capability	Actions
INPUT 1	Yes	4K60 444 2CH Non-HDR	Auto	Edit

Inputs displays information about **Name**, **Sync Detected**, **EDID**, and **HDCP Receiver Capability**. Additionally, under **Actions**, click **Edit** to configure the applicable input.

Outputs

Settings Page - Outputs

Outputs

Analog Settings (Autosaved)

Analog Audio Volume 0


Select the desired **Analog Audio Volume** by using the slider or inputting a value.

Security

The Security page displays configuration settings related to security for the DM-NVX-E760/DM-NVX-E760C. The SSL mode and authentication options can be configured on this page.

The Security page can be accessed at any time by clicking the **Security** tab in the navigation bar of the web user interface of the DM-NVX-E760/DM-NVX-E760C.

DM-NVX-E760/DM-NVX-E760C Security Page

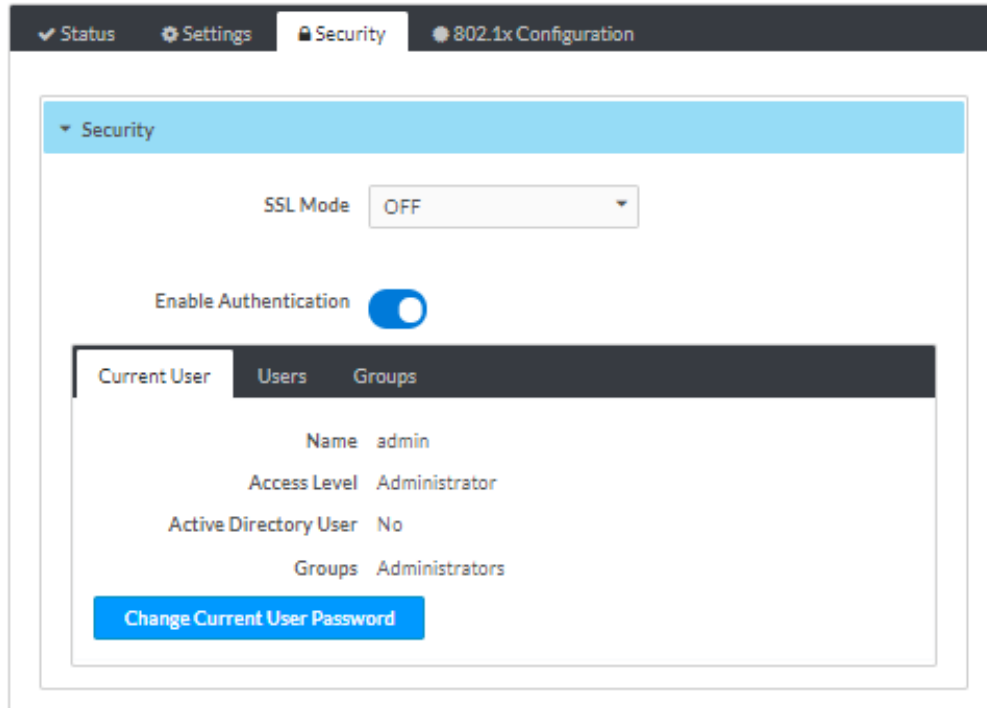

Select **Encrypt and Validate**, **Encrypt**, or **OFF** in the **SSL Mode** drop-down to specify whether to use encryption. By default, **SSL Mode** is set to **OFF**.


By default, the authentication mode is enabled.

Move the **Enable Authentication** slider to the desired position to specify whether authentication will be enabled or disabled.

NOTES:

- When authentication is enabled, you must create a local administrator account by creating a username and password. These credentials will be necessary to log in.
- When authentication is disabled, all existing users and groups will be deleted from the system.

Enable Authentication Dialog Box

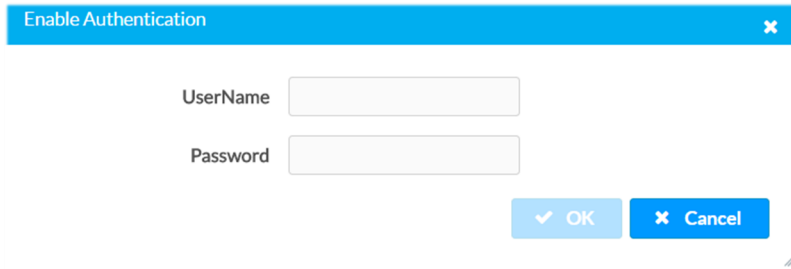


The dialog box has a blue title bar with the text "Enable Authentication" and a close button (X). Below the title bar are two input fields: "UserName" and "Password". At the bottom of the dialog are two buttons: "OK" (with a checkmark icon) and "Cancel" (with an X icon).

After enabling or disabling authentication, the current device session will end and you will be redirected to the login page. Enabling or disabling authentication does not affect existing user or group accounts on DM-NVX-E760/DM-NVX-E760C.

Once authentication is enabled, only users with administrator rights can disable it. When authentication is enabled, click the corresponding **Current User**, **Users** or **Groups** tabs to view, add, remove, and edit information local or Active Directory users and groups on DM-NVX-E760/DM-NVX-E760C or to change password for the current user.

Security Page

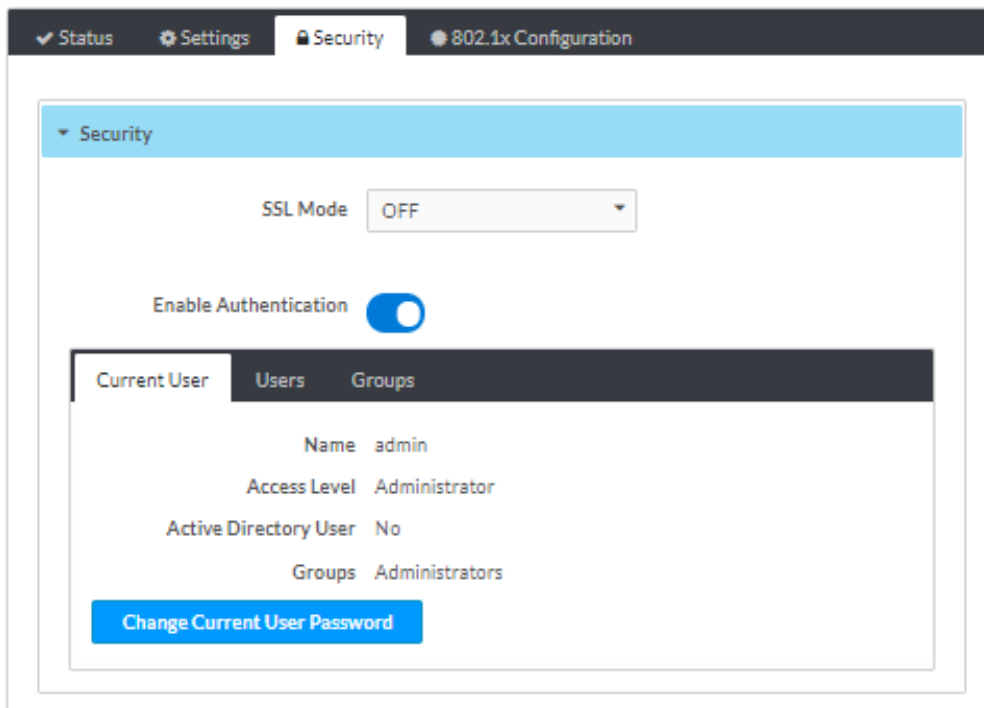

The screenshot shows the "Security" page in a web interface. The top navigation bar includes "Status", "Settings", "Security", and "802.1x Configuration". The "Security" section is expanded, showing "SSL Mode" set to "OFF" and "Enable Authentication" turned on. Below this are three tabs: "Current User", "Users", and "Groups". The "Current User" tab is active, displaying the following information:

Name	admin
Access Level	Administrator
Active Directory User	No
Groups	Administrators

At the bottom of the "Current User" tab is a blue button labeled "Change Current User Password".

Current User

Click the **Current User** tab to view read-only information or to change password for current user.

Security Page - Current User

The screenshot shows the 'Security' page with a 'Current User' tab selected. The 'SSL Mode' is set to 'OFF'. 'Enable Authentication' is turned on. The 'Current User' tab displays the following information:

Name	admin
Access Level	Administrator
Active Directory User	No
Groups	Administrators

Below the information is a blue button labeled 'Change Current User Password'.

1. Click the **Change Current User Password** button to provide a new password for the current user.
2. In the **Change Password** dialog, enter the current password in the **Current Password** field, the new password in the **Password** field, then re-enter the same new password in the **Confirm Password** field.

Change Password Dialog Box


The 'Change Password' dialog box contains three password input fields: 'Current Password', 'Password', and 'Confirm Password'. Each field is masked with dots. At the bottom right, there are two buttons: 'OK' (with a checkmark icon) and 'Cancel' (with an 'X' icon).

3. Click **OK** to save or click **Cancel** to cancel the changes.

Users

Click the **Users** tab to view and edit user settings. The **Users** tab can be used to add local and Active Directory users, remove local and Active Directory users, and preview information about users.

Security Page - Users

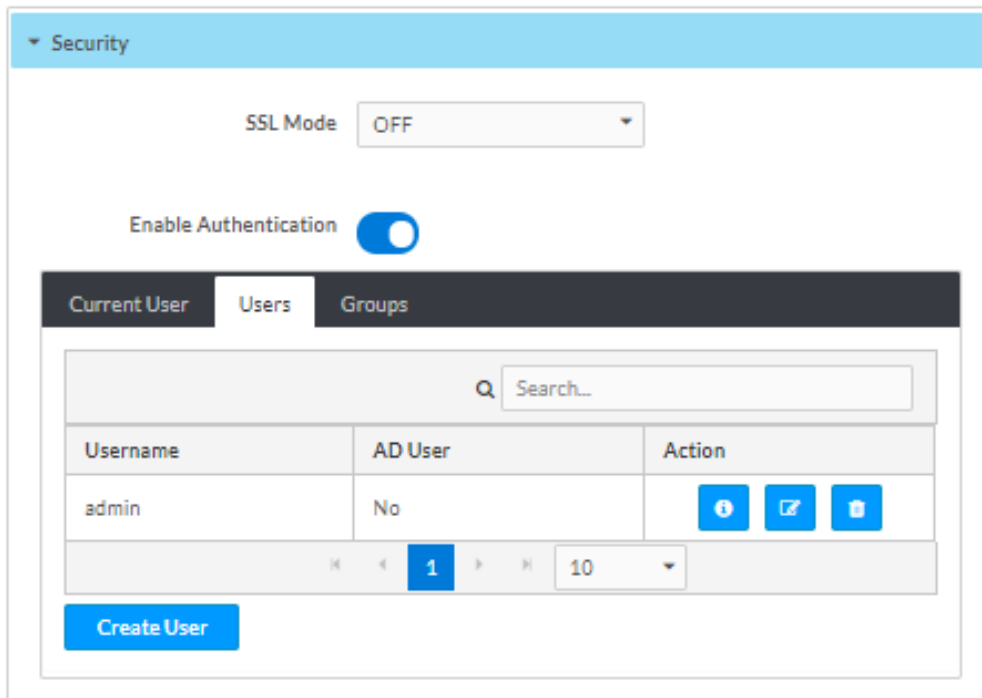



Use the **Search Users** field to enter search term(s) and display groups that match the search criteria.

If users listed in the **Users** table span across multiple pages, navigate through the list of users by clicking a page number or by using the left or right arrows at the bottom of the **Users** pane to move forward or backward through the pages.

Each page can be set to display 5, 10, or 20 users by using the drop-down menu to the right of the navigation arrows.

Information about existing users is displayed in table format and the following details are provided for each user.

- **Username:** Displays the name of the user.
- **AD User:** Displays whether the user requires authentication using Active Directory.


Click the corresponding button in the **Actions** column to view detailed group information  or to delete the group .

To create new group, click the **Create User** button.

Create New Local User

1. Click the **Create User** button in the User tab.
2. In the **Create User** dialog enter the following.

Create User Dialog Box

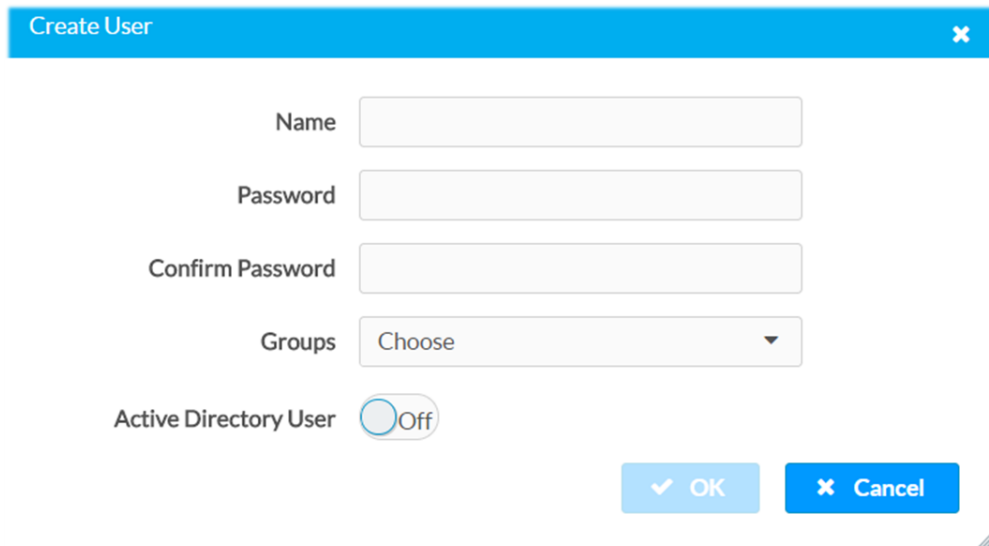

The screenshot shows a 'Create User' dialog box with the following fields and controls:

- Name**: Text input field.
- Password**: Text input field.
- Confirm Password**: Text input field.
- Groups**: Dropdown menu with 'Choose' selected.
- Active Directory User**: Toggle switch set to 'Off'.
- OK** and **Cancel** buttons at the bottom right.

- Enter a user name in the **Name** field. A valid user name can consist of alphanumeric characters (letters a-z, A-Z, numbers 0-9) and the underscore "_" character.
 - Enter a password in the **Password** field; re-enter the same password in the **Confirm Password** field.
 - Assign the access level by selecting one or more groups from the **Groups** drop- down list.
 - Make sure that the **Active Directory User** slider is set to **Off**.
3. Click **OK** to save. Click **Cancel** to cancel the changes.

Add Active Directory User

Users cannot be created or removed from the Active Directory server, but access can be granted to an existing user in the Active Directory server.

To grant access to an Active Directory user, you can either add the user to a local group on the DM-NVX-E760/DM-NVX-E760C, or add the Active Directory group(s) that they are a member of to the DM-NVX-E760/DM-NVX-E760C (see the [Add Active Directory Group \(on page 28\)](#) topic for more information).

To add an Active Directory user:


1. Click the **Create User** button.
2. In the **Create User** dialog, enter the following.

Create User Dialog Box

The screenshot shows a 'Create User' dialog box. It has a blue header bar with the text 'Create User' and a close button (X). Below the header, there is a 'Name' text input field. Below the 'Name' field, there is a red error message: 'Username is required'. Below the error message, there is a 'Groups' dropdown menu with 'Choose' selected. Below the 'Groups' dropdown, there is a red error message: 'Group Must be selected'. Below the error messages, there is a toggle switch for 'Active Directory User' which is currently turned 'On'. At the bottom right, there are two buttons: 'OK' and 'Cancel'.


- Enter the user name in the **Name** field in the format "Domain\UserName", for example "crestronlabs.com\JohnSmith".
Valid user names can contain alphanumeric (letters a-z, A-Z, numbers 0-9) and underscore characters.
 - Select one or more groups from the **Groups** drop-down list.
 - Make sure that the **Active Directory User** slider is set to **On**.
3. Click **OK** to save. Click **Cancel** to cancel the changes.

Delete User

Click the trashcan button () in the **Actions** column to delete the user. Click **Yes** when prompted to delete the user or **No** to cancel the deletion.


After a user is removed from a group, they lose any access rights associated with that group. Note that the user account is not deleted by the delete user operation.

View User Details

Click the information button () in the **Actions** column to view information for the selected user. The **User Details** dialog displays the following information for the selected user.

- **Name:** Displays the name of the selected user.
- **Active Directory User:** Displays whether the user is an Active Directory user.
- **Group:** Displays group(s) the selected user is part of.

User Details Dialog Box

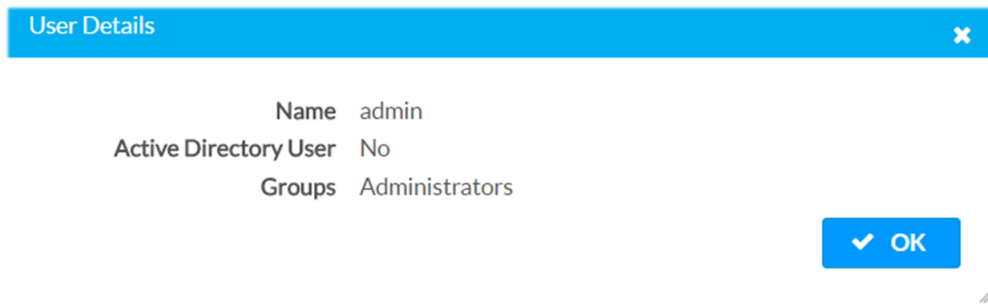


The dialog box has a blue title bar with the text "User Details" and a close button (X). The main content area is white and contains the following text:

Name	admin
Active Directory User	No
Groups	Administrators

At the bottom right, there is a blue button with a checkmark and the text "OK".

Click **OK** to close the **User Details** dialog and to return to the **Authentication Management Users** tab.


Update User Details

1. Click the information button () in the **Actions** column to update information for the selected user.
2. Enter a password in the **Password** field; re-enter the same password in the **Confirm Password** field.
3. Select one or more groups to assign the user to from the **Groups** drop-down list.
4. Click **OK** to save or click **Cancel** to cancel the changes.


The **Update User** dialog also displays the following read-only information for the selected user.

- **Name:** Displays the name of the user.
- **Active Directory User:** Displays whether the user is an Active Directory user.

Update User Dialog Box

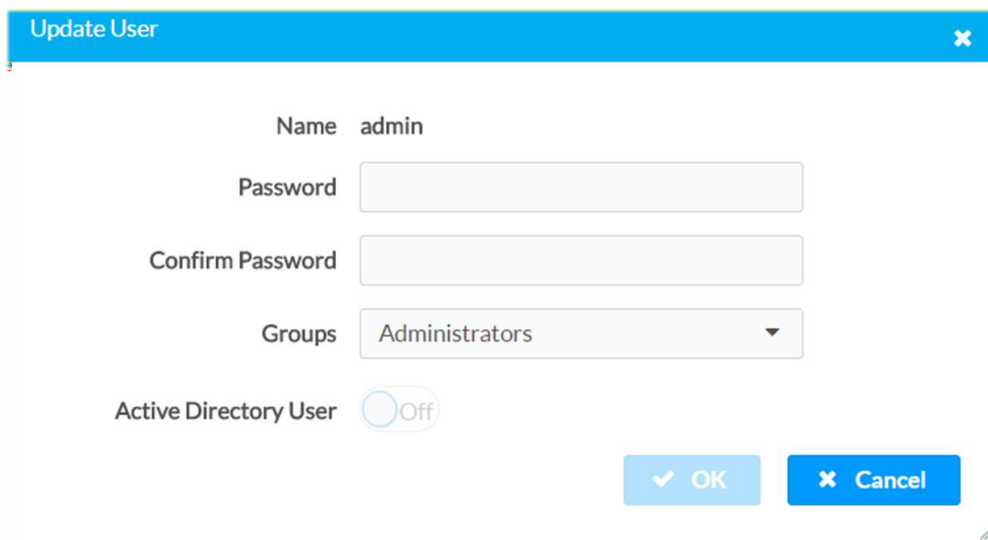

The dialog box has a blue title bar with the text "Update User" and a close button (X). The main content area is white and contains the following fields:

Name	admin
Password	<input type="password"/>
Confirm Password	<input type="password"/>
Groups	Administrators 
Active Directory User	<input type="checkbox"/> Off

At the bottom right, there are two buttons: a blue button with a checkmark and the text "OK", and a blue button with an X and the text "Cancel".

Groups

Click the **Groups** tab to view and edit group settings. The **Groups** tab can be used to add local and Active Directory groups, remove local and Active Directory groups, and preview information about a group.

Use the **Search Groups** field to enter search term(s) and display groups that match the search criteria.

Security Page - Groups

The screenshot displays the 'Security Page - Groups' interface. At the top, there is a 'Security' header with a dropdown menu. Below this, the 'SSL Mode' is set to 'OFF' and 'Enable Authentication' is turned on. The main content area has three tabs: 'Current User', 'Users', and 'Groups'. The 'Groups' tab is active, showing a search bar and a table of groups. The table has four columns: 'Group Name', 'AD Group', 'Access Level', and 'Action'. The groups listed are Administrators, Connects, Operators, Programmers, and Users. Each group has a blue edit icon and a blue delete icon in the 'Action' column. Below the table, there are navigation arrows and a page number '1' highlighted in blue. To the right of the navigation arrows is a drop-down menu showing '10'. At the bottom left, there is a blue 'Create Group' button.

Group Name	AD Group	Access Level	Action
Administrators	No	Administrator	
Connects	No	Connect	
Operators	No	Operator	
Programmers	No	Programmer	
Users	No	User	



If groups listed in the **Groups** table span across multiple pages, navigate through the groups by clicking a page number or by using the left or right arrows at the bottom of the Groups pane to move forward or backward through the pages.

Additionally, each page can be set to display 5, 10, or 20 groups by using the drop-down menu to the right of the navigation arrows.

Existing groups are displayed in a table and the following information is provided for each group:

- **Group Name:** Displays the name of the group.
- **AD Group:** Displays whether the group requires authentication using Active Directory.

- **Access Level:** Displays the predefined access level assigned to the group (Administrator, Programmer, Operator, User, or Connect).

Click the corresponding button in the **Actions** column to view detailed group information  or to delete the selected group .

Click on the **Create Group** button in the **Groups** tab to create new group.


Create Local Group

1. Click the **Create Group** button.
2. In the **Create Group** dialog enter the following:
 - Enter the group name in the **Name** field.
 - Assign the group access level by selecting a predefined access level (Administrator, Connect, Operator, Programmer, User) from the **Access Level** drop-down list.
 - Make sure that the **Active Directory Group** slider is set to **Off**.
3. Click **OK** to save. Click **Cancel** to cancel the changes.

Add Active Directory Group

A group cannot be created or removed from the Active Directory server, but access can be granted to an existing group in Active Directory.

Create Group Dialog Box

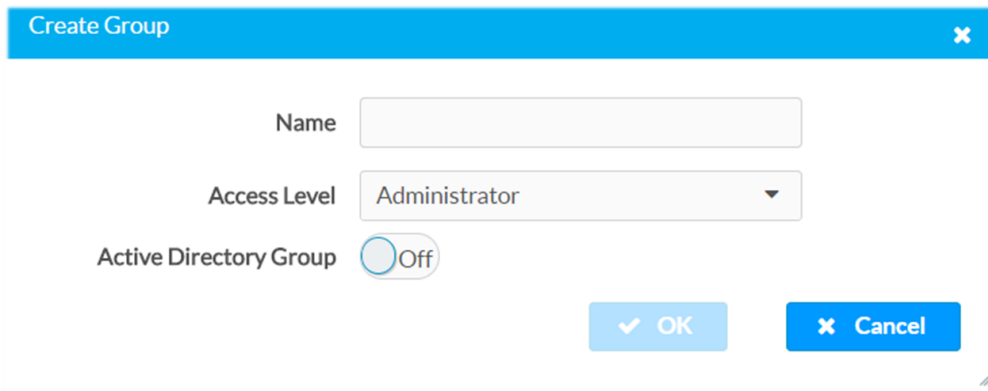

The screenshot shows a 'Create Group' dialog box with the following elements:

- Title Bar:** 'Create Group' with a close button (X).
- Name:** A text input field.
- Access Level:** A dropdown menu currently set to 'Administrator'.
- Active Directory Group:** A toggle switch currently set to 'Off'.
- Buttons:** 'OK' (with a checkmark) and 'Cancel' (with an X).

Once the group is added, all members of that group will have access to the DM-NVX-E760/DM-NVX-E760C.


1. Click the **Create Group** button.
2. In the **Create Group** dialog enter the following:
 - Enter the group name in the **Name** field, for example "Engineering Group."
Note that group names are case sensitive; space is a valid character than can be used in group names.

3. Assign the group access level by selecting a predefined access level (Administrator, Connect, Operator, Programmer, User) from the **Access Level** drop-down list.

Make sure that the **Active Directory Group** slider is set to **On**.

4. Click **OK** to save. Click **Cancel** to cancel the changes.

Delete a Group


Click the trashcan button () in the **Actions** column to delete a group. Click **Yes** when prompted to delete the group or **No** to cancel the deletion.

When a group is deleted, users in the group are not removed from the device or Active Directory server. However, because a user's access level is inherited from a group(s), users within the deleted group will lose the access rights associated with this group. When an Active Directory group is removed from DM-NVX-E760/DM-NVX-E760C, all members of that group will lose access to the DM-NVX device.

View Group Details

Click the information button () in the **Actions** column to view information for the selected group. The **Group Details** dialog listing the following information for the selected group.

Group Details Dialog Box

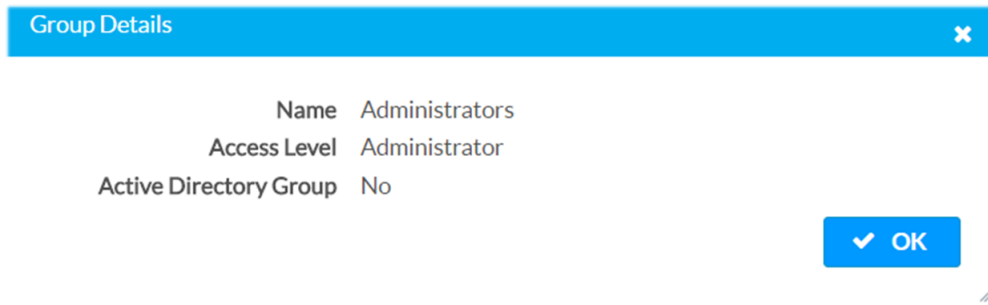

- **Name:** Displays the name of the group.
- **Access Level:** Displays the access level of the group and its users.
- **Active Directory Group:** Displays whether the group is an Active Directory group.

Click **OK** to close the **Group Details** dialog and to return to the Authentication Management Groups settings.

802.1x Configuration

The DM-NVX-E760/DM-NVX-E760C has built-in support for the 802.1x standard (an IEEE network standard designed to enhance the security of wireless and Ethernet LANs. The standard relies on the exchange of messages between the device and the network's host, or authentication server), allowing communication with the authentication server and access to protected corporate networks.

The 802.1x Configuration page can be accessed at any time by simply clicking the **802.1x Configuration** tab in the navigation bar of the web user interface of the DM-NVX-E760/DM-NVX-E760C.

802.1x Configuration Page

802.1x Configuration

IEEE 802.1x Authentication

Authentication Method

Domain

Username

Username cannot be empty

Password

Password cannot be empty

Enable Authentication Server Validation

Select Trusted Certificate Authorities

- AAA Certificate Services
- AC RAIZ FNMT-RCM
- ACCVRAIZ1
- Actalis Authentication Root CA
- AffirmTrust Commercial
- AffirmTrust Networking
- AffirmTrust Premium ECC
- AffirmTrust Premium
- Amazon Root CA 1
- Amazon Root CA 2

Configure DM-NVX-E760/DM-NVX-E760C for 802.1X Authentication:

1. Move the **IEEE 802.1X authentication** slider to **Enabled**. This will enable all options on the 802.1X dialog.
2. Select the **Authentication method: EAP-TLS Certificate** or **EAP-MSCHAP V2 Password** according to the network administrator's requirement.
3. If you select **EAP-TLS Certificate**, click **Manage Certificates** to upload the required machine certificate.

The machine certificate is an encrypted file that will be supplied by the network administrator, along with the certificate password.

-or-

If you select **EAP-MSCHAP V2 Password**, enter the Username and Password supplied by the network administrator into the **Username** and **Password** fields. This method does not require the use of a machine certificate, only the user name and password credentials.

4. If you enabled the **Enable Authentication Server Validation** option, this will enable the list box **Select Trusted Certificate Authority(ies)** which contains signed Trusted Certificate Authorities (CAs) pre-loaded into the DM-NVX-E760/DM-NVX-E760C.

Select the check box next to each CA whose certificate can be used for server validation, as specified by the network administrator.

If the network does not use any of the listed certificates, the network administrator must provide their own certificate, which must be uploaded manually, via the **Manage Certificates** functionality.

5. If required, type the domain name of the network in the **Domain** field.

This page is intentionally left blank.

